

## Brush Strip Application Instructions

Your pack will include:


2 x 2.5M Brush Strip

2 x Wipes (Contains: Ethanol, Water, Aloe Vera, Parfum) KEEP OUT OF REACH OF CHILDREN

Lay door on the side as per diagram

Remove the protective film from the door frame

Ensure the top surface is clean - use supplied wipe.  
Allow to dry (2 minutes)

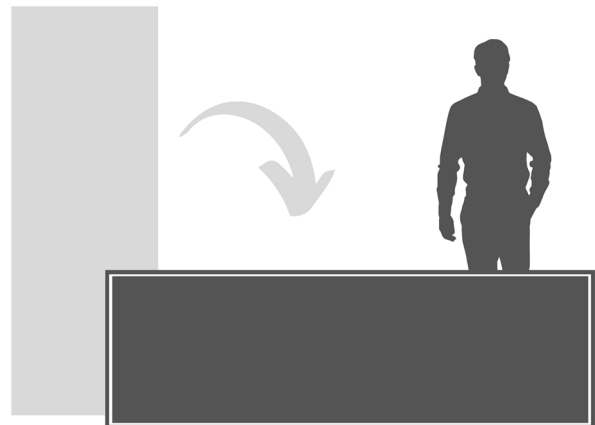


Starting at the top of the door, remove approximately 150mm of backing and press the brush strip firmly on to the metal frame in the centre.

With the backing still attached align to the bottom of the door and cut to size.

Continue to work your way from the top along the door removing 150mm of backing tape at a time to achieve a straight line with maximum adhesion.

Leave the last 80mm of backing in place.

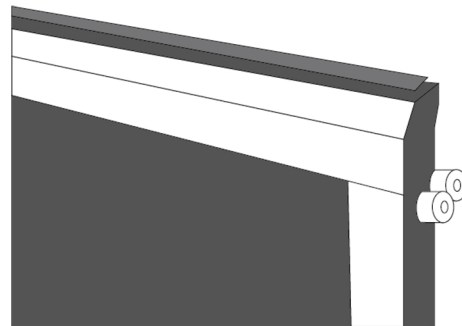

Repeat on the other side of the door if necessary.

Once the door is installed in the track and levelled, the bottom 80mm of backing tape can be removed and the strip secured to the

